



Sensor is located outside the enclosure in a metal cap for better accuracy.

ALL DIMENSIONS IN MILLIMETERS				REVISION	
NO.	DATE	BY	CHK	DESCRIPTION	REVISION
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					

VT510 v2

A0